


**REBEL**  
BORN TO BE STRONG


**СКАМЬЯ**

**МНОГОФУНКЦИОНАЛЬНАЯ**

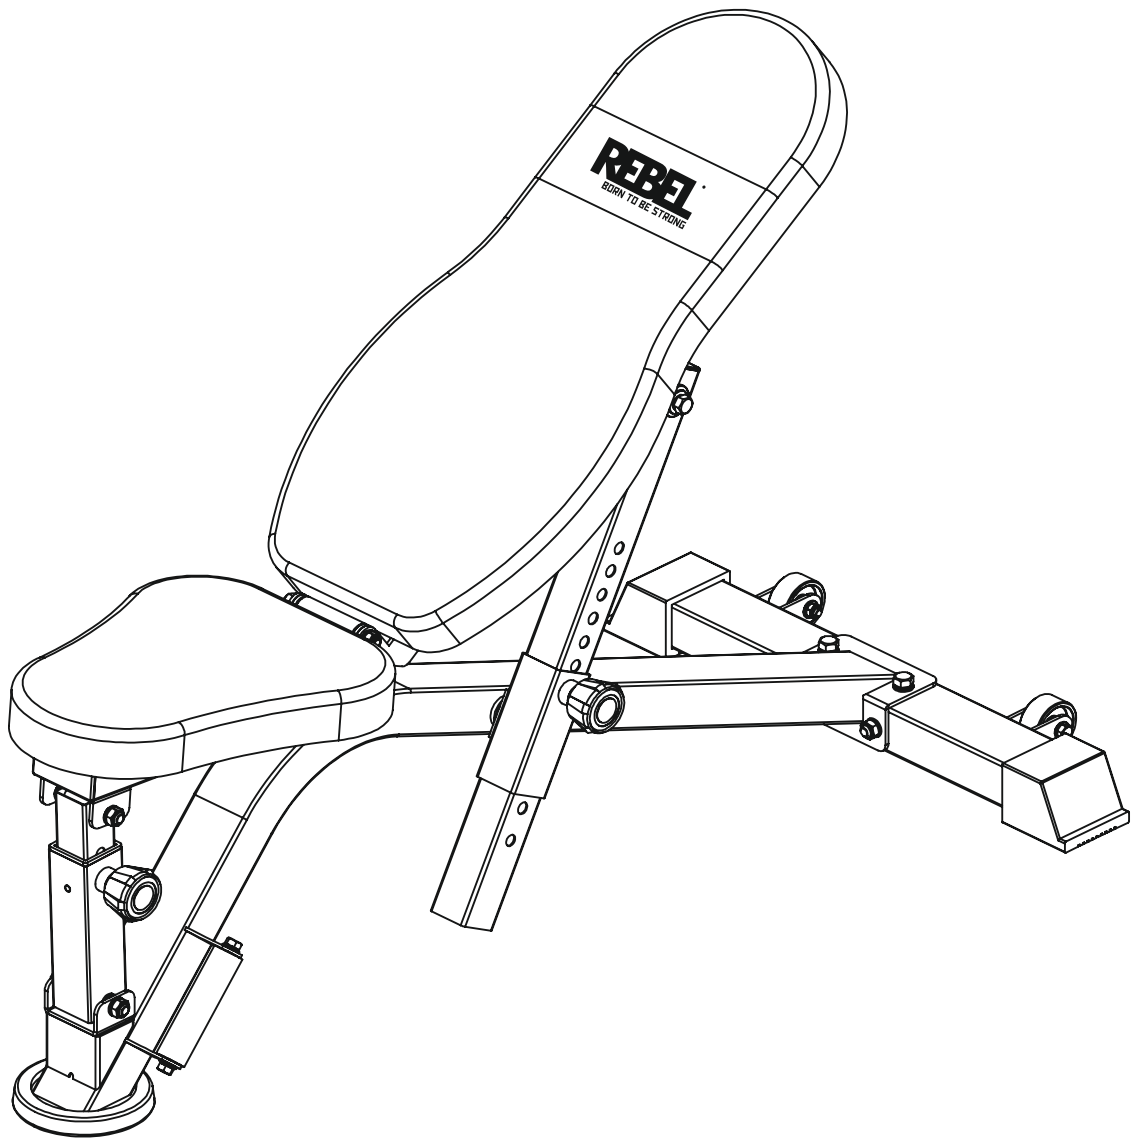



**RP306**

инструкция по сборке

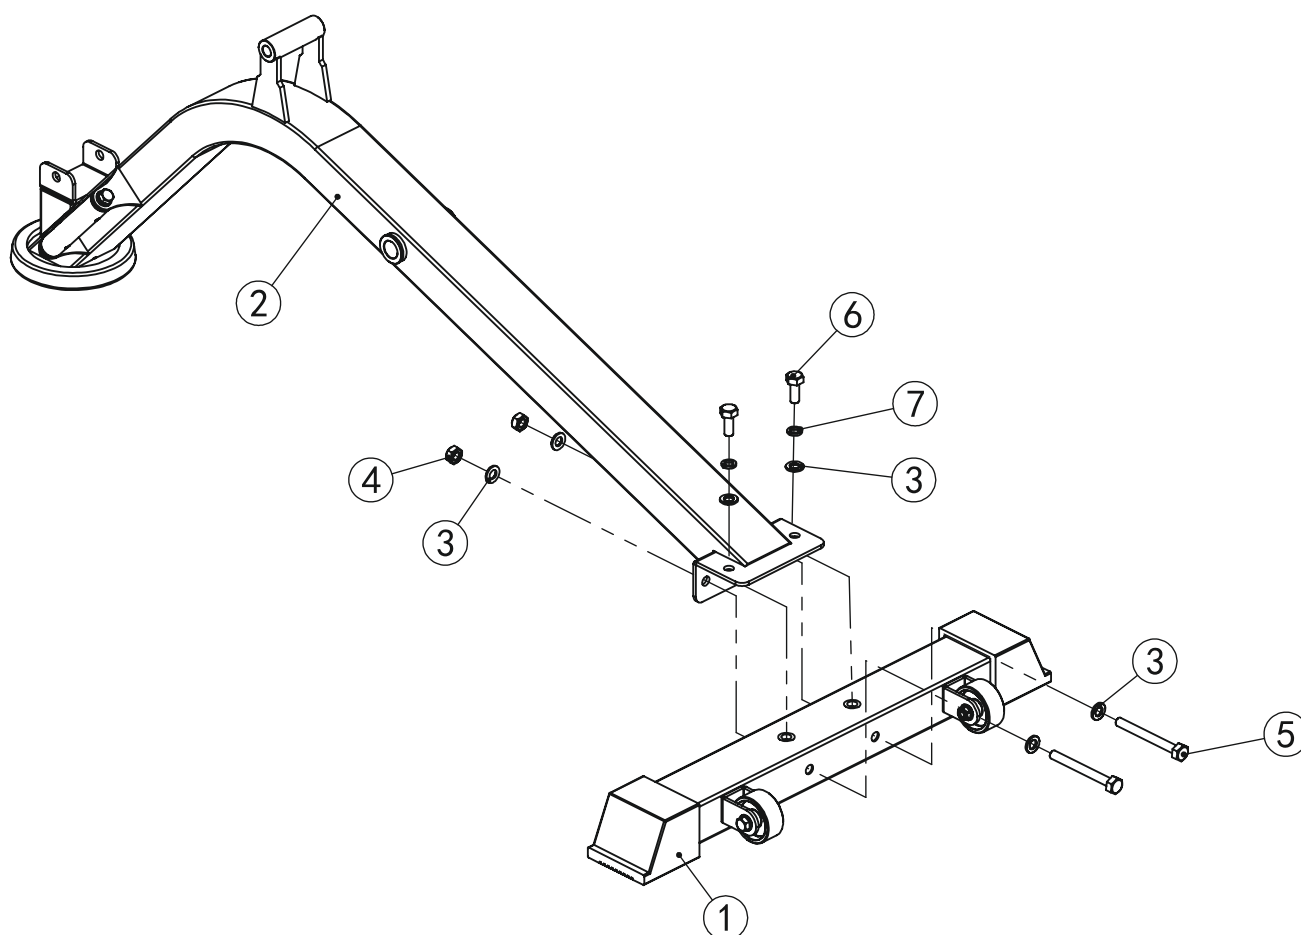



№.		Кол-во
1		1
2		1
3	Φ10	6
4	M10	2
5	M10x90	2
6	M10x25	2
7	Φ10	2

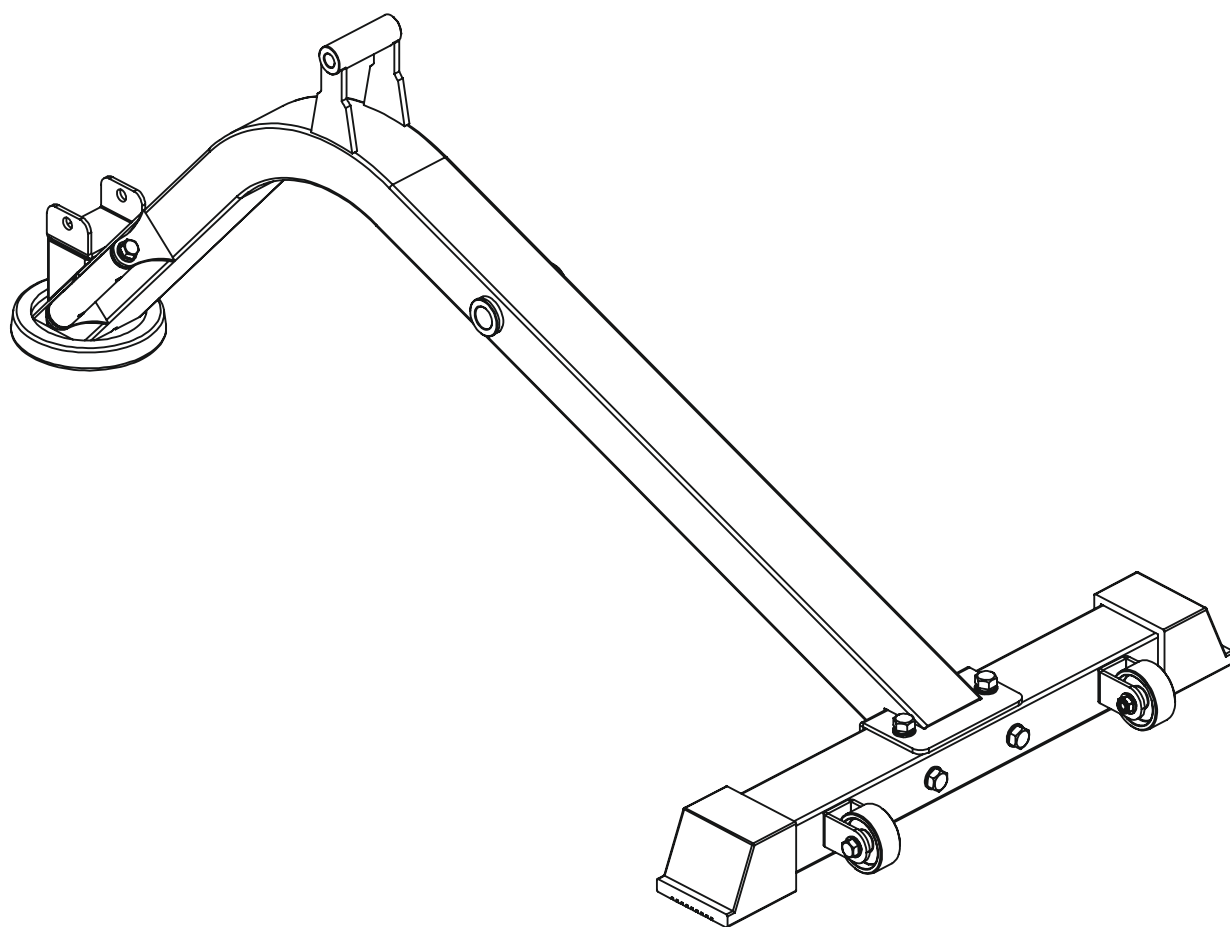

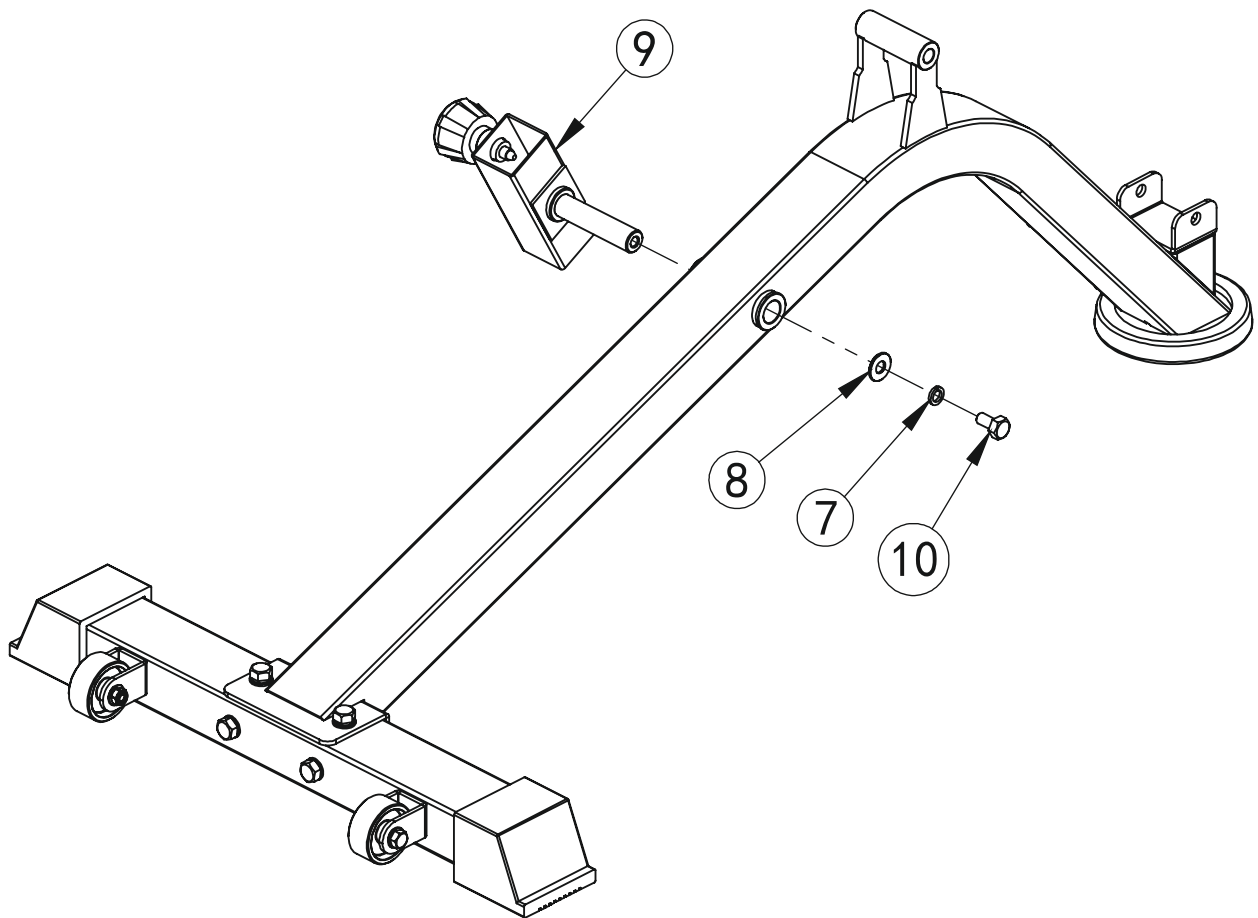



No.		Кол-во
7	Φ10	1
8	Φ	1
9		1
10	M10x20	1

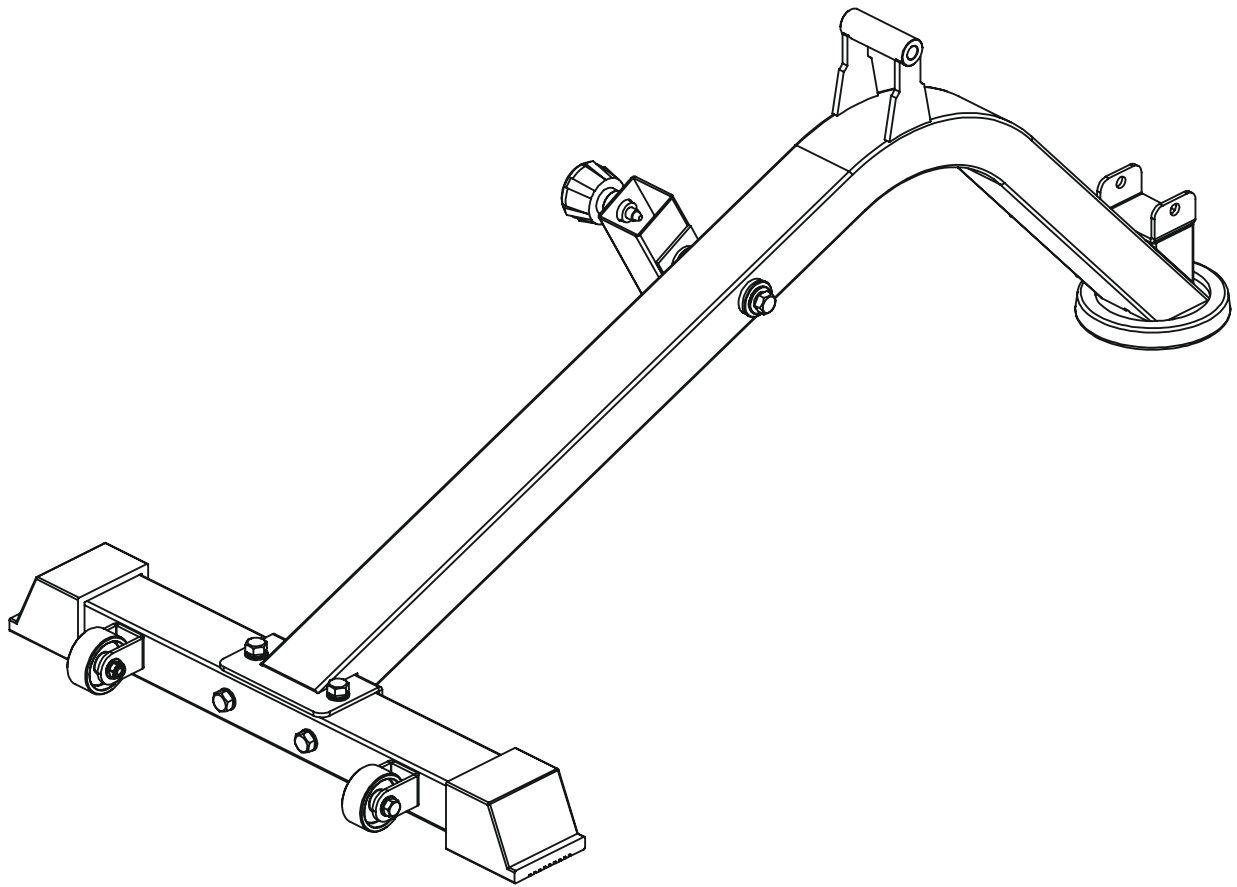

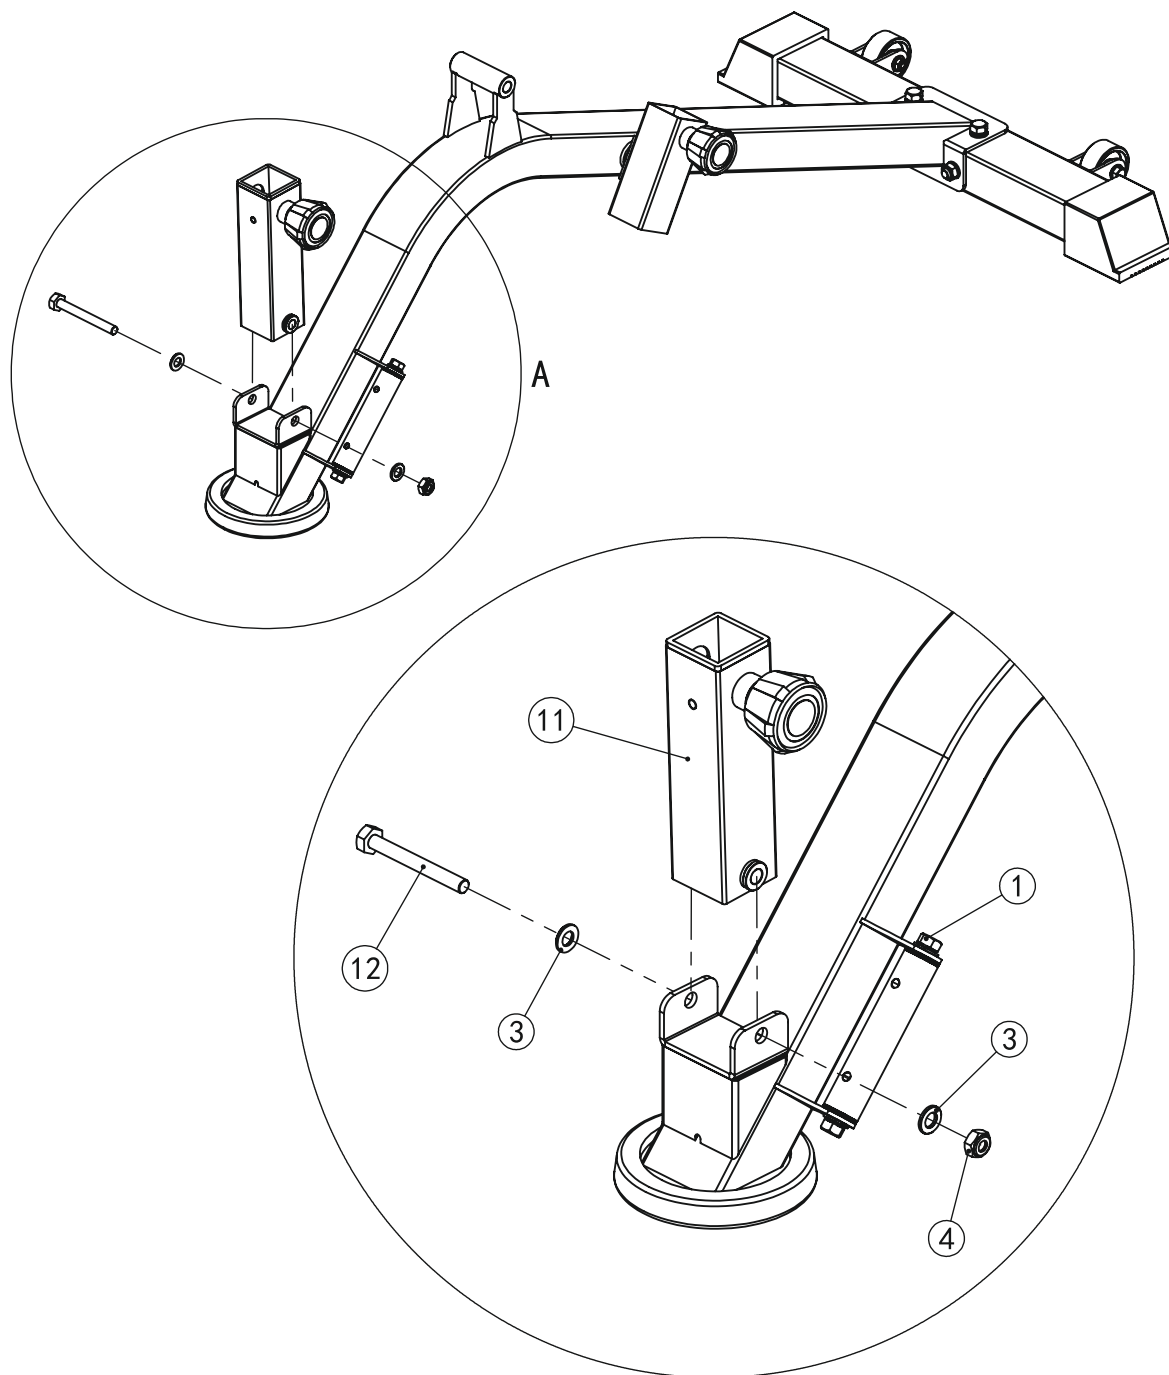


№.		Кол-во
11		1
12	M10x85	1
3	Φ10	2
4	M10	1

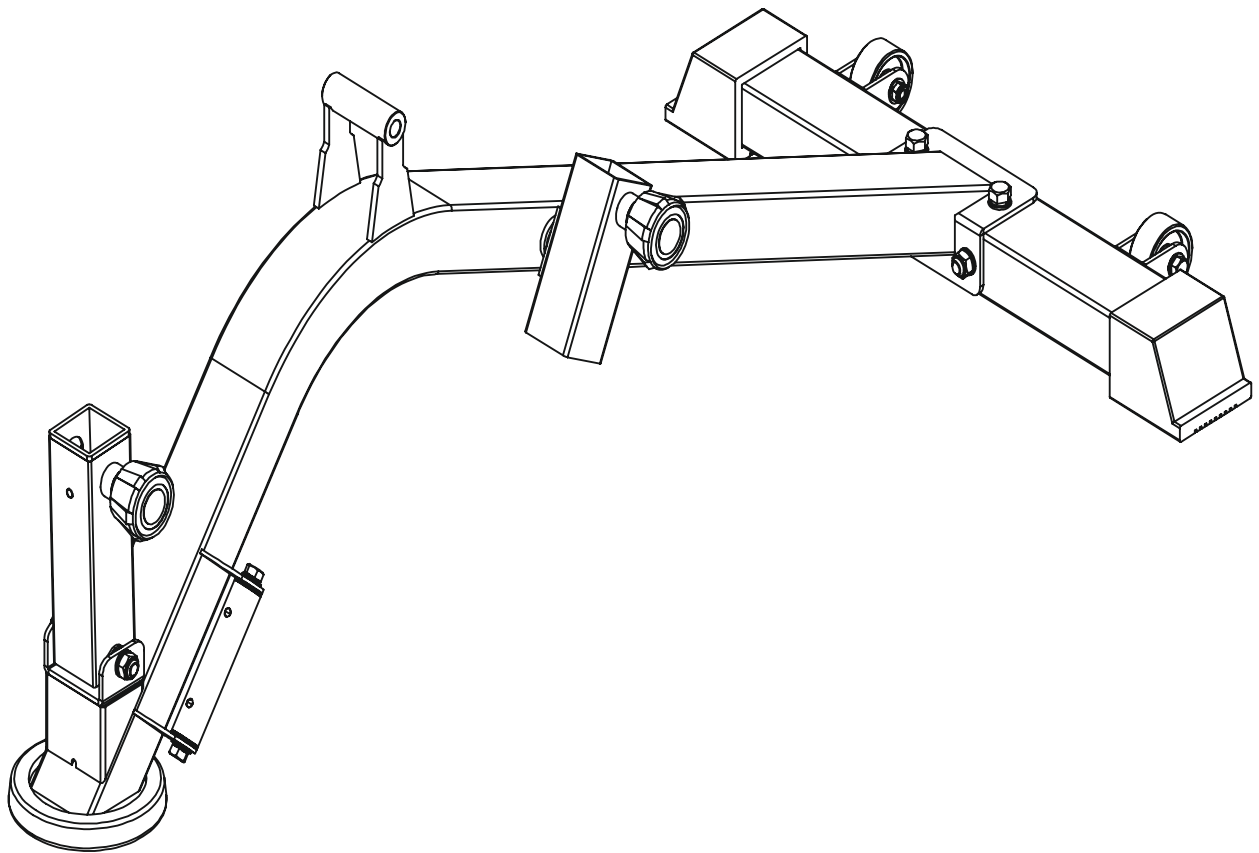


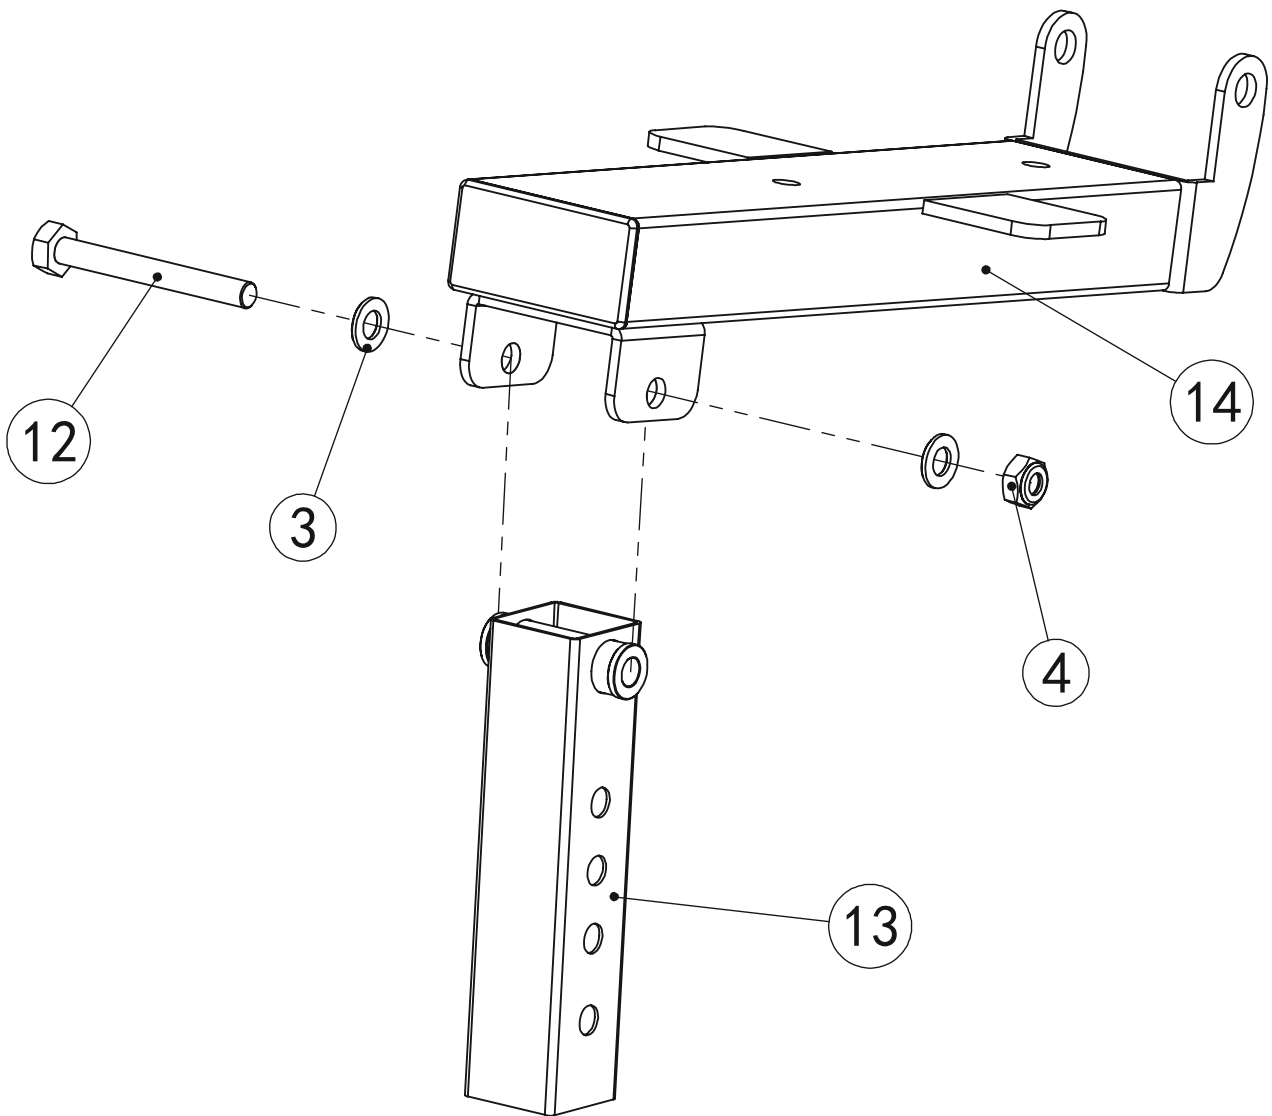


№.		Кол-во
13		1
14		1
3	Φ10	2
4	M10	1
12	M10x85	1




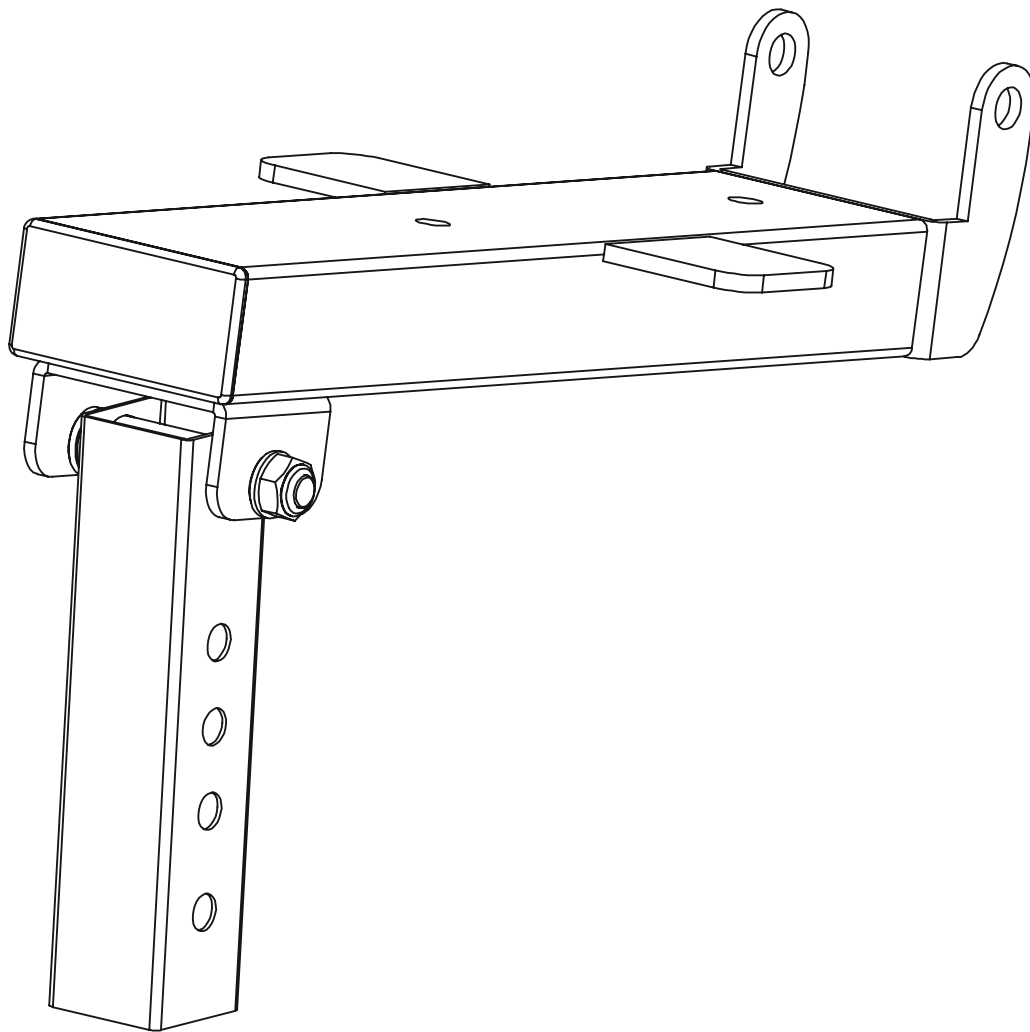

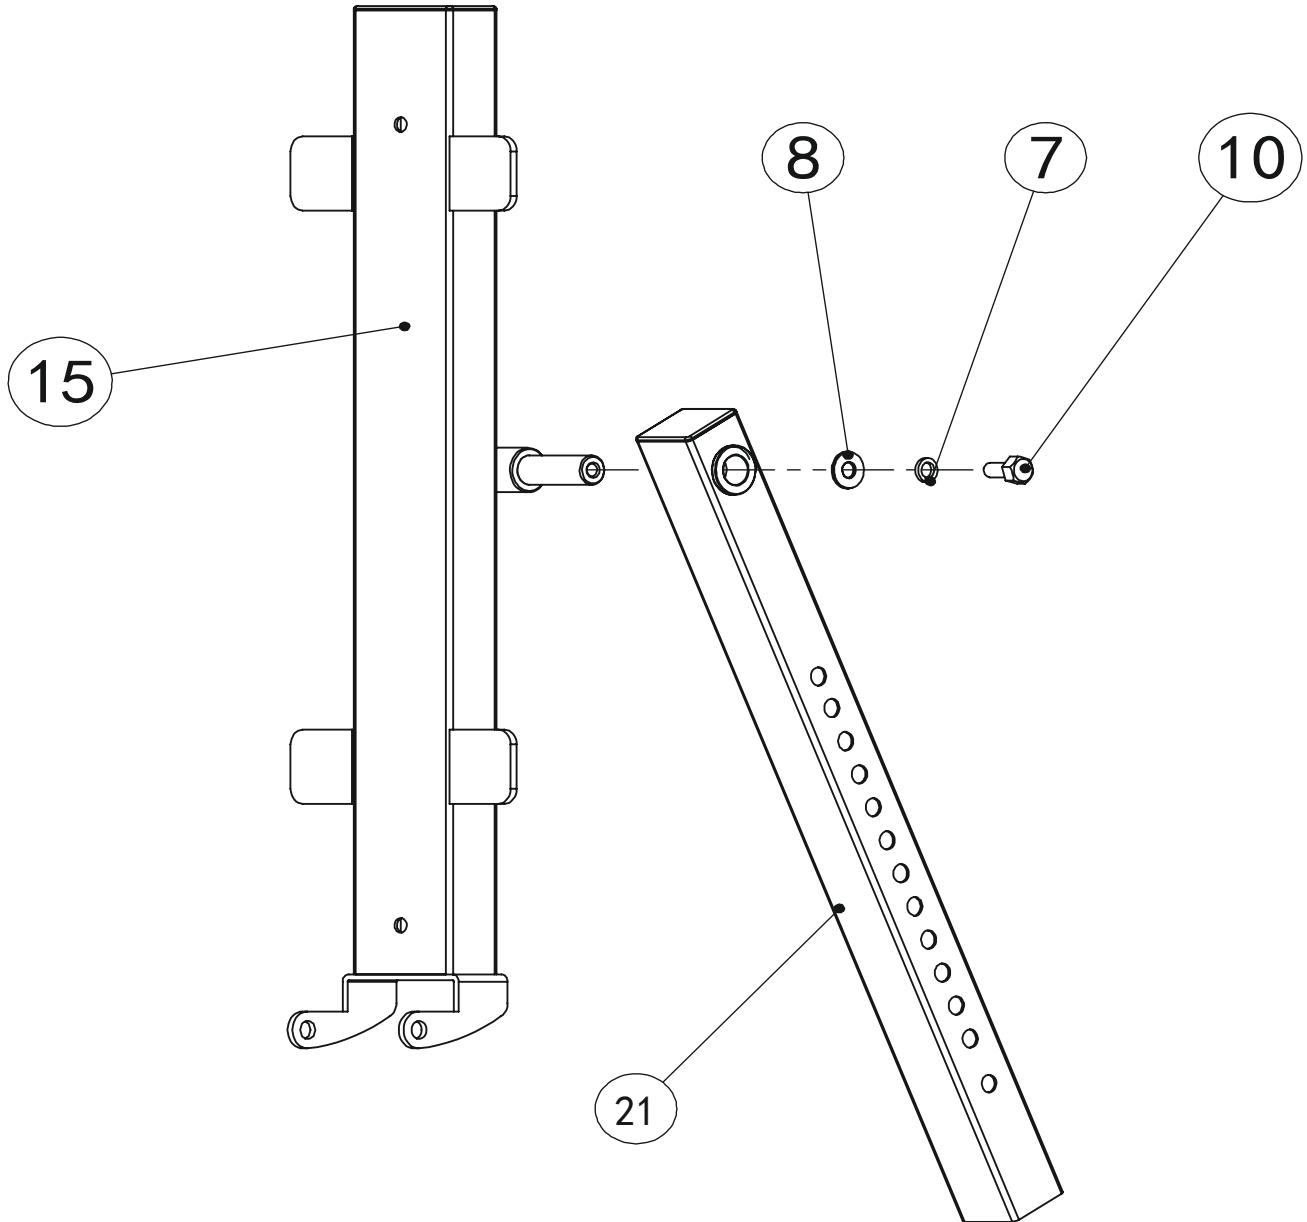



No.	Description	Note	Qty.
15	back pad tube		1
7	spring washer	Φ10	1
8	big washer	Φ	1
10	hexagon bolt	M10x20	1
21	back pad adjuster		1

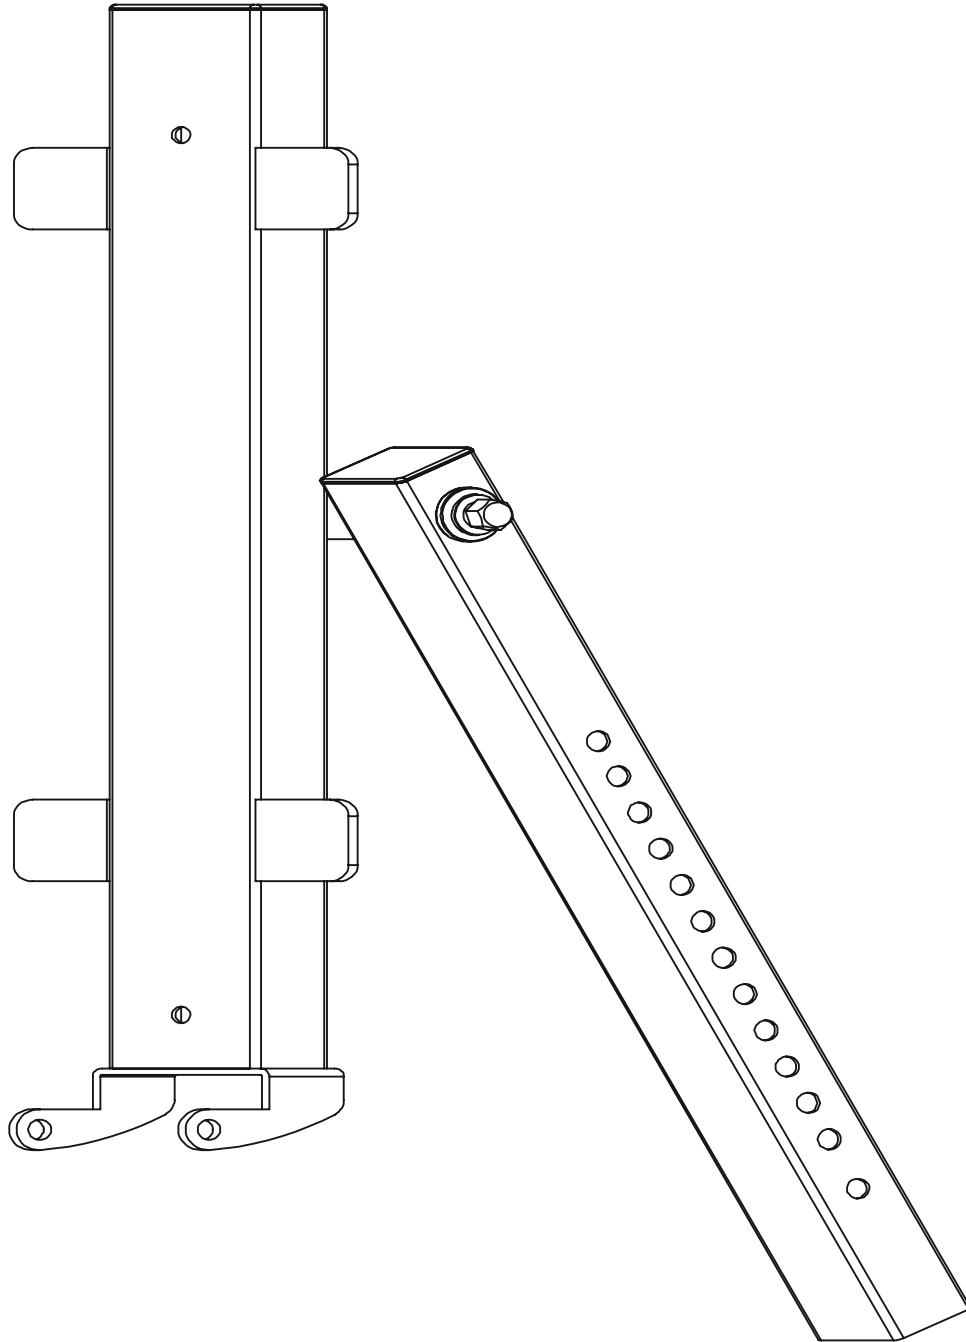

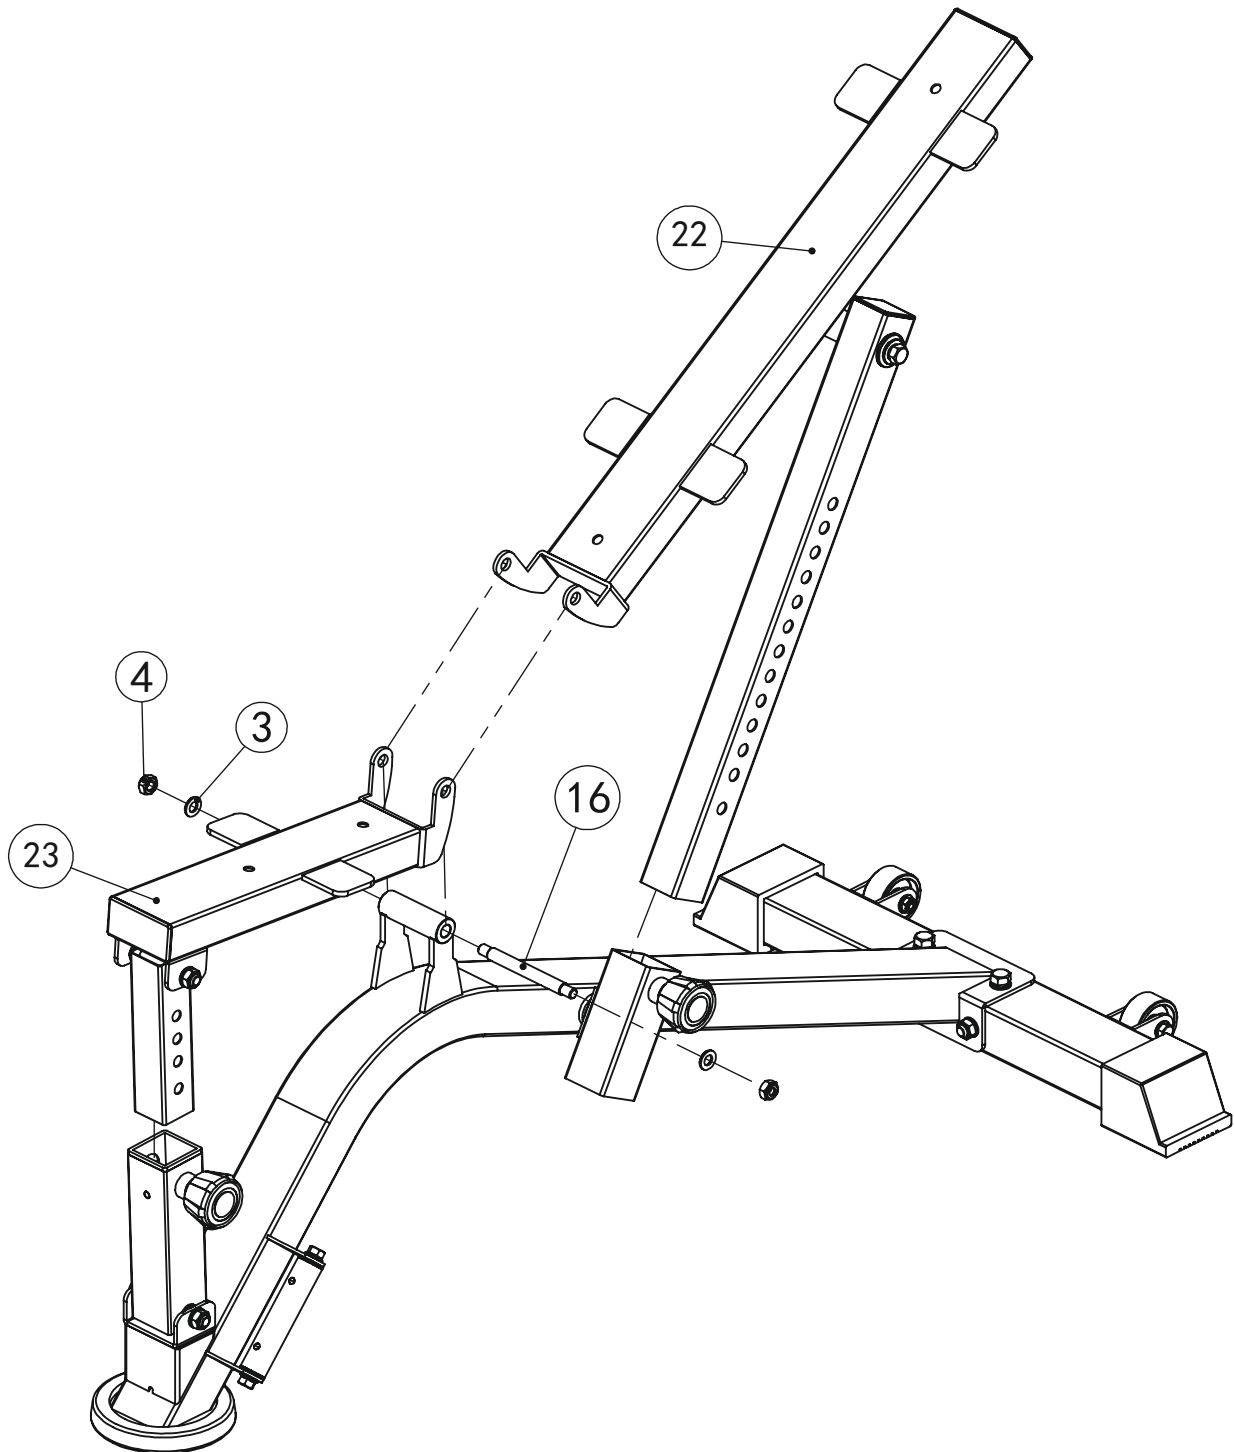

No.	Description	Note	Qty.
16	shaft		1
3	washer	Φ10	2
4	lock nut	M10	2

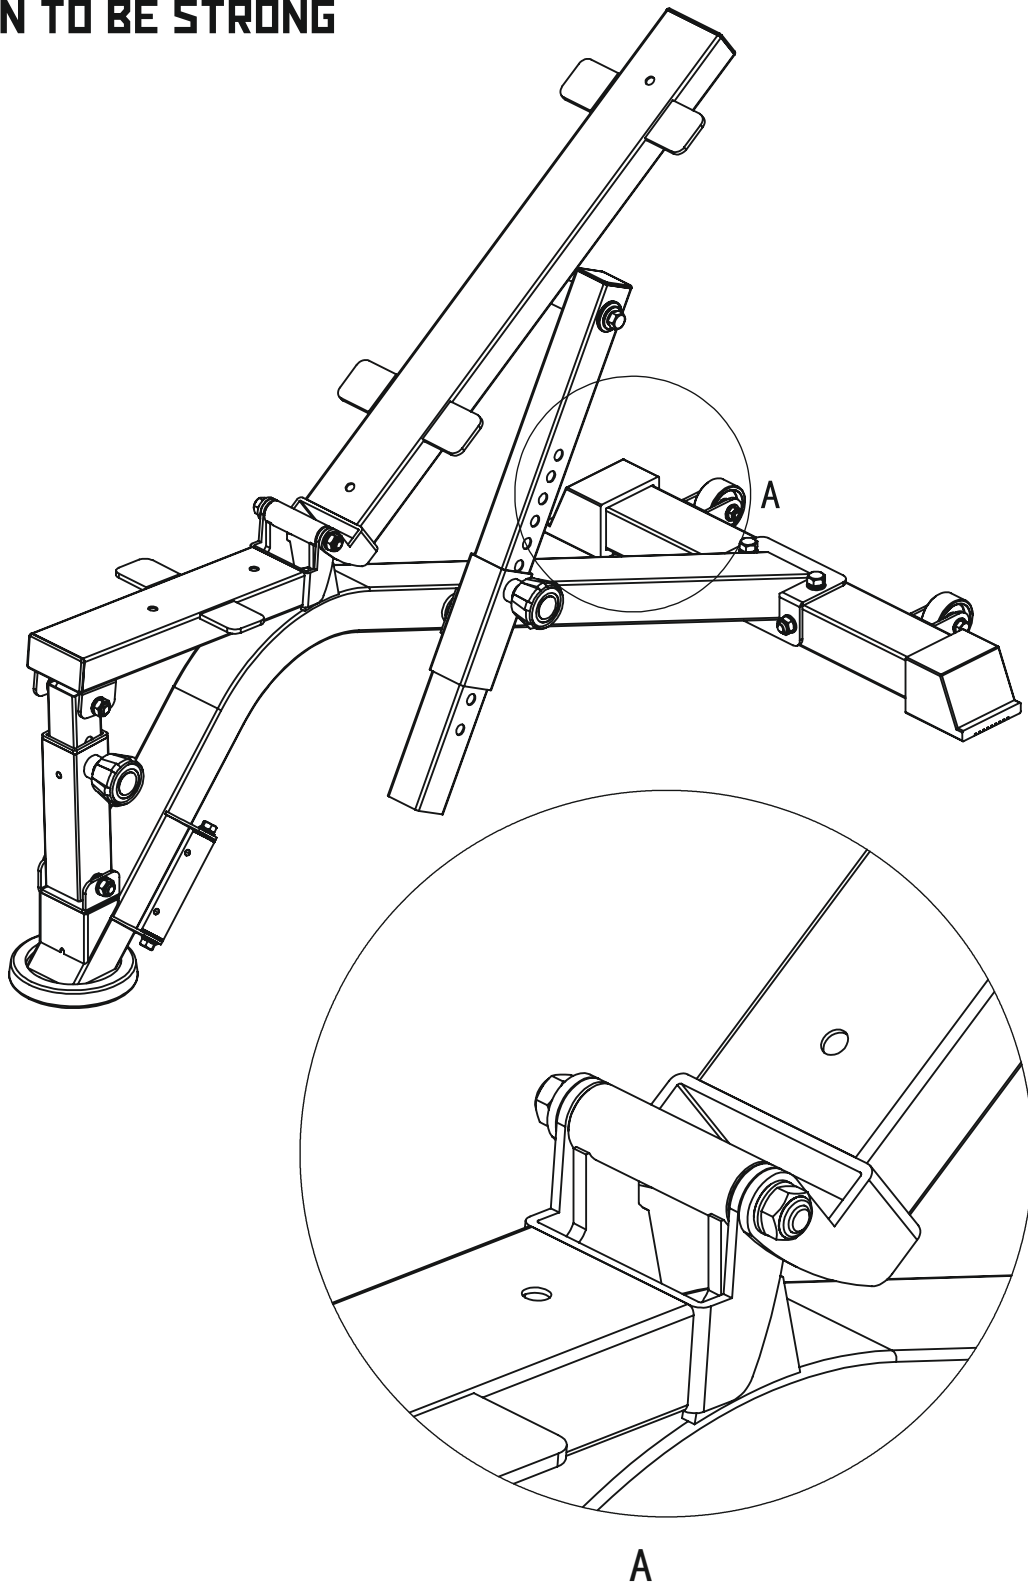

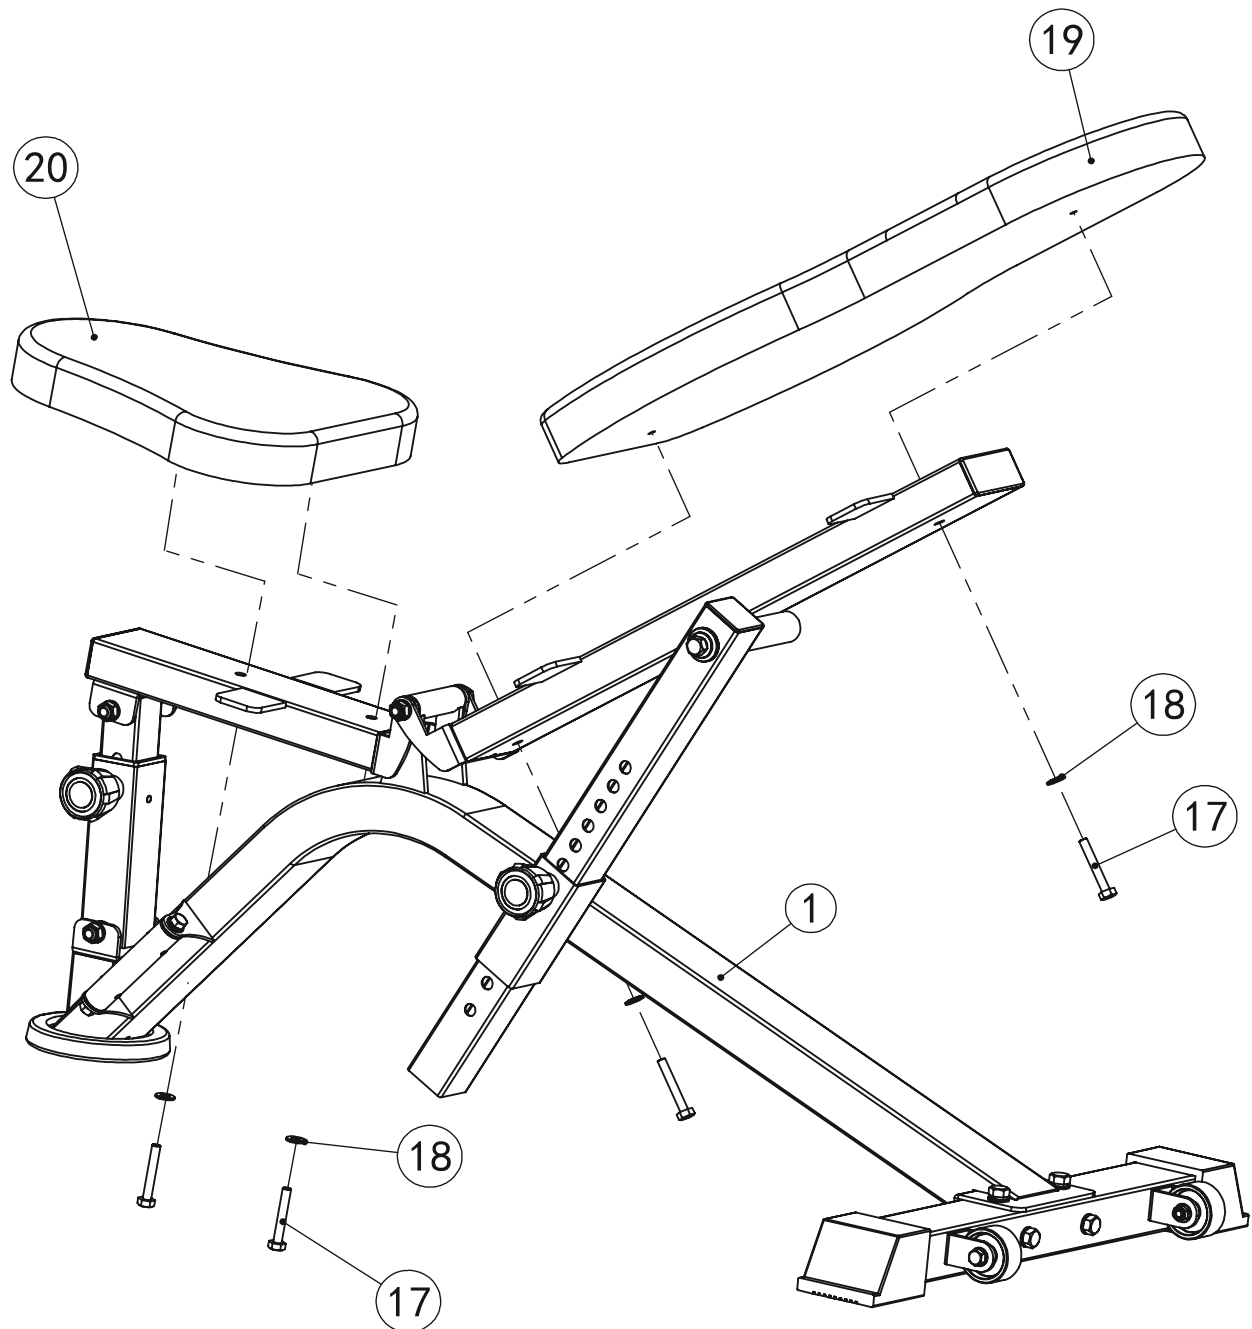

No.	Description	Note	Qty.
17	hexagon bolt	M8x55	4
18	washer	Φ8	4
19	back pad		1
20	seat pad		1

